





FEATURES

- High-quality 925 lumen white 6500k COB LED
- Secondary rear 475 lumen white 6500k COB LED
- Extra 150 lumen white 6500k SMD LED top torch
- Super tough aluminium & nylon construction
- Compact hand-held size
- Super strong magnetic base
- 180° Vertical folding head
- IK07 Shock proof 2m drop resistant
- IP54 Dust & water resistant
- High quality 3.7v 2600mAh Li-ion battery
- 3 Battery level & charging indicators
- Low battery warning flash reminds to charge
- 5V-1A USB-C charging 4 hour charge time
- 1m high quality 1A USB-C cable included

BATTERY - 3.7v 2600mAh Li-ion Rechargeable Battery

WEIGHT - 193a

DIMENSIONS - folded 162 x 40 x 29mm / extended 304 x 33 x 29mm

OPERATION

SWITCH SEQUENCE:- Top Torch > Main Floodlight Low > Main Floodlight High > Rear Floodlight Low > Rear Floodlight High > Off SMART MEMORY FUNCTION:- If left ON in any mode for 5+ seconds, the next press will turn OFF. Next press ON will return to the last mode used

ADVICE & IMPORTANT INFORMATION!

- Do not look directly at LEDs.
 Do not operate in direct sunlight or extreme temperature conditions (below -10°C or above 40°C)
- LEDs can become warm/hot when switched on; DO NOT touch and NEVER place face down on any surface – risk of fire! Even once the device has been switched off, DO NOT place face down as the LED and Lens can stay hot/
- warm for a while.

 Do not use the device if there is any visible damage.

 Do not use the device in the immediate vicinity of flammable materials or gases.

 Take care when charging, check the charging output on the charging source you are using and DO NOT exceed the stated Max charging input or damage may occur to the battery and may void the warranty.

- may occur to the battery and may void the warranty. The rechargeable battery will reach full performance after a few complete charging and discharging cycles.

 To keep the rechargeable battery in optimum condition, it should be recharged every 3-6 months, especially if it is not being used for a long period of time. Always fully charge rechargeable batteries before storage and if the rechargeable battery can be removed, this is advised to avoid battery depletion and avoids the risk of a battery leaking.

 Always protect lithium batteries from heat, intense sunlight, fire, water and moisture danger of explosion!
- moisture danger of explosion!
- If a battery is damaged, fluids can leak out. AVOID contact as this can lead to skin irritation and/or burns. If skin contact occurs, rinse thoroughly with water. If irritation persists, seek medical advice. Seek immediate medical assistance if lithium battery fluid comes into contact with the eyes.

ANSI FL1 Standard 150 **Top Torch** 27 M 8 H 170 Main Flood - Low 24 M 8 H Lumen 925 Main Flood - High 41 M 25 H 150 Rear Flood - Low 17 M 9 H Lumen 475 Rear Flood - High 26 M 4 H Lumen

RECHARGING

- Only use a 5V USB-C charging cable (Max 1A).
- 2. Lift the charging port cover on the side of the light.
- 3. Plug the USB-C end of the cable into the charge port.
- Plug the USB-A end of the cable into a USB charging source (do not exceed 5V-1A charging input or damage may occur. Please do not use "Fast Chargers" as this can over-load the battery).
- Green Flash indicates charging, Solid Green indicates fully charged.
- 6. Charge Time: 4 hours
- 7. Make sure the charge port cover is secured back in place.

LOW BATTERY ALERT FLASH - when the battery voltage drops to around 5%, the lamp will flash 3 times to alert you that charging is needed very soon.

(PRODUCT CAN BE USED WHILE RECHARGING, HOWEVER **BRIGHTNESS WILL DECREASE)**

*Warranty void if not used with the specified cable & max charge



- Children under 12 years of age should only use the product under adult supervision.
- Do not disassemble or attempt to modify the product; this will void the warranty and can be dangerous. Improper use or modification is not covered
- under the warranty.

 Take care not to let lenses come into contact with hard/sharp objects, damage/scratches to lenses will affect light output
- Do not use the product in the immediate vicinity of flammable materials or
- Before cleaning the product, disconnect the charge cable. Clean with a dry or slightly moist, clean, lint-free cloth and a mild detergent if required. Do not use cleaners that contain abrasives or solvents.

 This product is rated to IPX4 - DO NOT SUBMERGE. If the product has been
- subjected to excessive moisture/water the warranty may be void.
- This product has a 1 year standard warranty (or extended to 2 years once registered online at WWW.UNILITE.CO.UK/WARRANTY) against manufacturing faults and defects. It does not cover normal wear and tear, modifications, accidental damage or poor maintenance. Unlite standard warranty does not cover disposable batteries that have leaked or the use of incorrect chargers and cables that can damage rechargeable batteries.
- Do not dispose of this device in normal household waste. It must be disposed of via an authorised electrical appliance disposal centre or at your local waste disposal unit
- Please recycle packaging responsibly. Keep these instructions for future reference or for subsequent possessors.